


Master/Slave

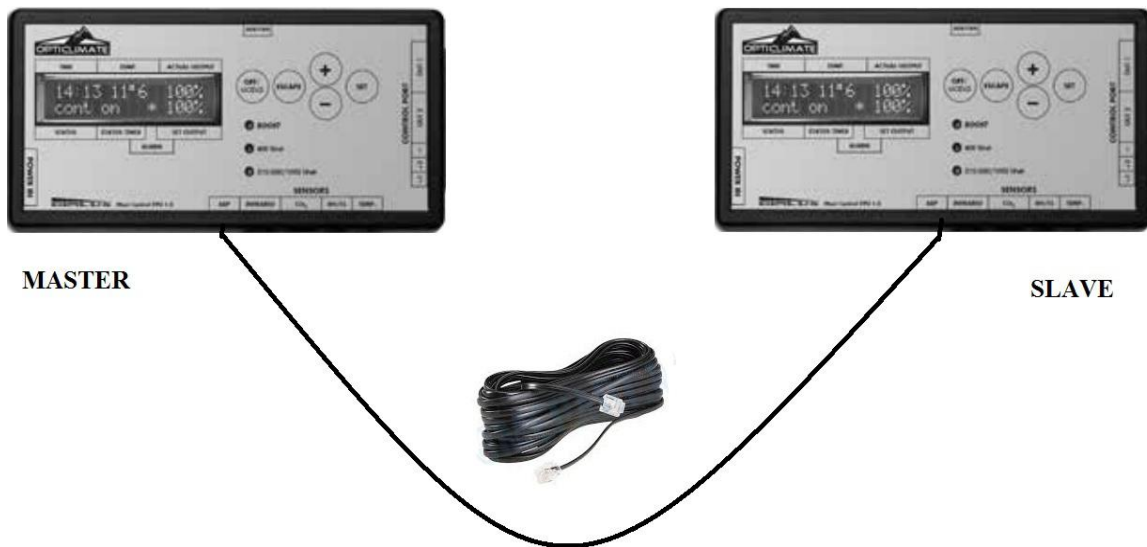

Order ABP cable (communication cable)

- 5mtr ordernr 2-360
- 10mtr ordernr 2-361
- 20mtr ordernr 2-362

- Connect both ends in the controllers ABP connection.
- Choose Advanced menu by holding the SET key.
- In the master controller choose timer, countdown or on with the modus key.
- In the slave controller choose slave/copy or slave invert with the modus key.

Both controller now work on the timer/clock from the master controller.